


FIREPLACE #115

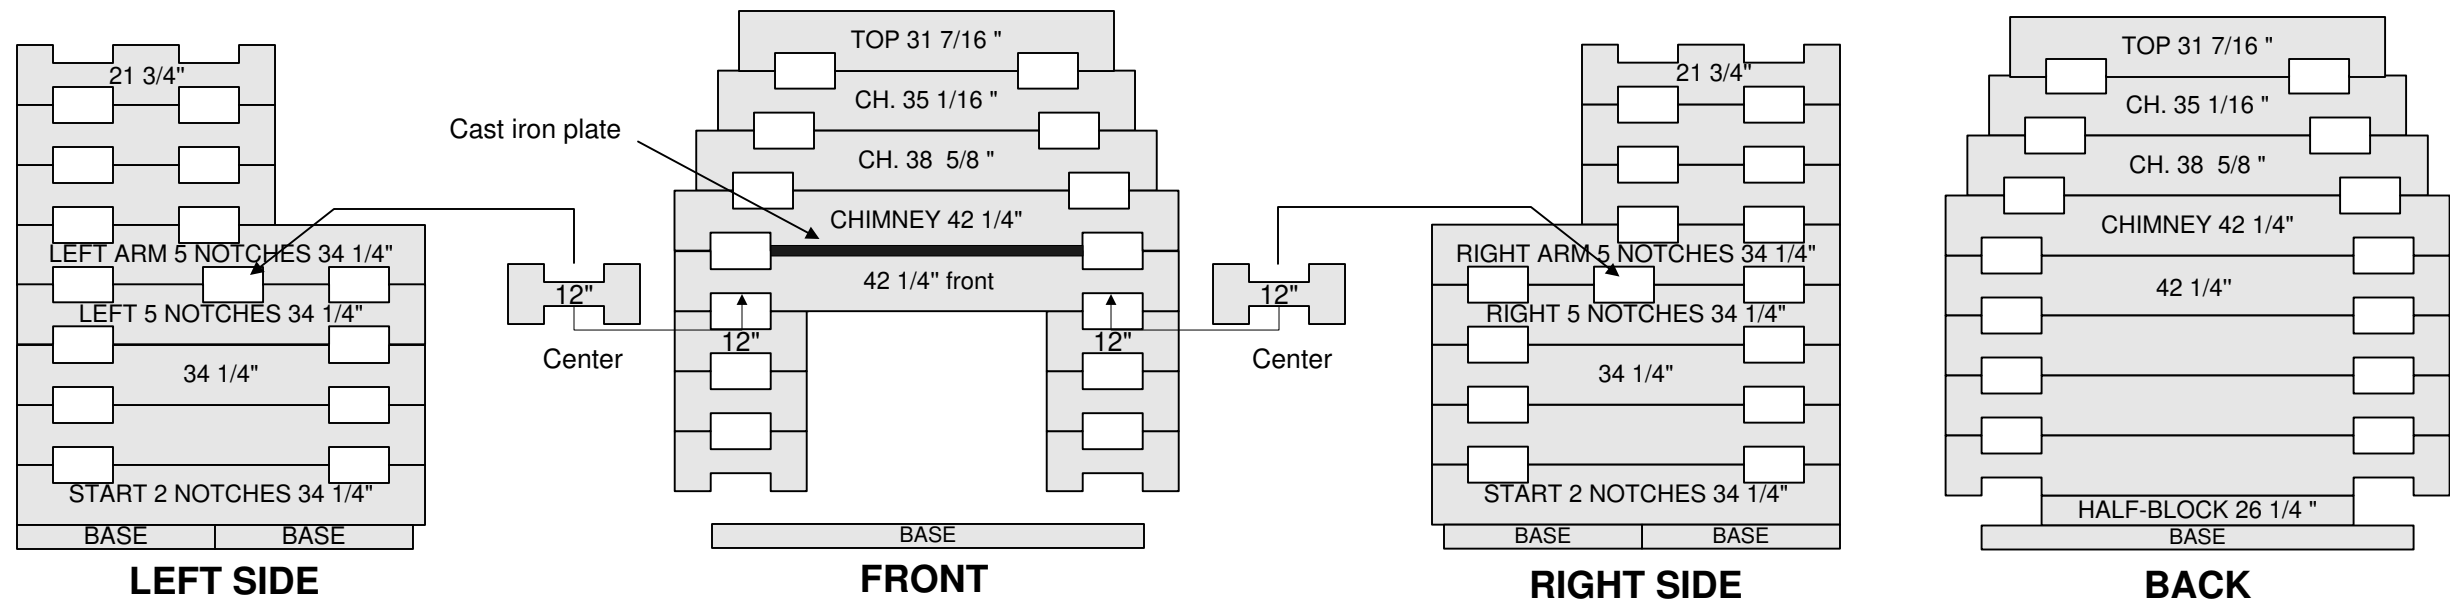

The flat side of each block must be put towards inside the fireplace. On this model, it is mandatory to put the enamelled cast iron plate to be sure the smoke can be ejected by the chimney, not by its front. It is strongly recommended to put in place the slides for #115 to support the plate and to apply a joint of silicone between every row of the chimney to prevent the smoke from escaping between the rows. Visit www.feuardent.com (Assembly section) for advices and assembly's pictures of your fireplace and the available accessories.

