


PART NUMBER	DESCRIPTION	QTY
53-028-001-R0	FRONT	1
53-028-002-R0	BACK	1
53-028-003-R0	LEFT SIDE	1
53-028-004-R0	RIGHT SIDE	1
53-028-005-R0	TOP	1
# 6-20 X 3/8"	BLACK SCREWS	28

MADE IN CANADA

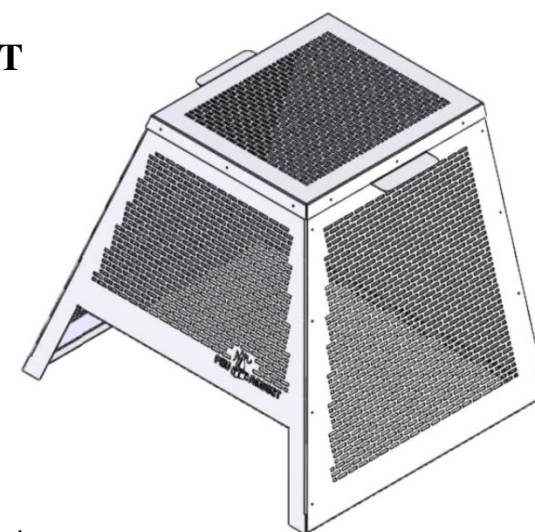

Assembly plan – Pyramid Screen

Step 1 : Place the RIGHT panel over the edge of the REAR panel.

Make sure that the inclination of the pyramid screen is forward, that the edges of the panels are inward and that the pre-drilled holes of the 2 panels are facing each other to screw them together with the provided screws.

Step 2 : Assemble in the same way the LEFT panel with the REAR panel.

Step 3 : Assemble the FRONT panel making sure that the RIGHT and LEFT panels cover its edges.

Step 4 : Finish by the TOP making sure that its right-angled side is towards the REAR panel.